


Ditec CUBIC6FM

IP1818

Manuale di installazione finecorsa magnetici per CUBIC6
 Installation manual for magnetic limit switch for CUBIC6
 Manuel d'installation de fin de course magnétique pour CUBIC6
 Wartungshandbuch für magnetisch Endschalter für CUBIC6
 Manual de instalación de fin de carrera magnético por CUBIC6
 Manual de instalação de fim de curso magnético para CUBIC6

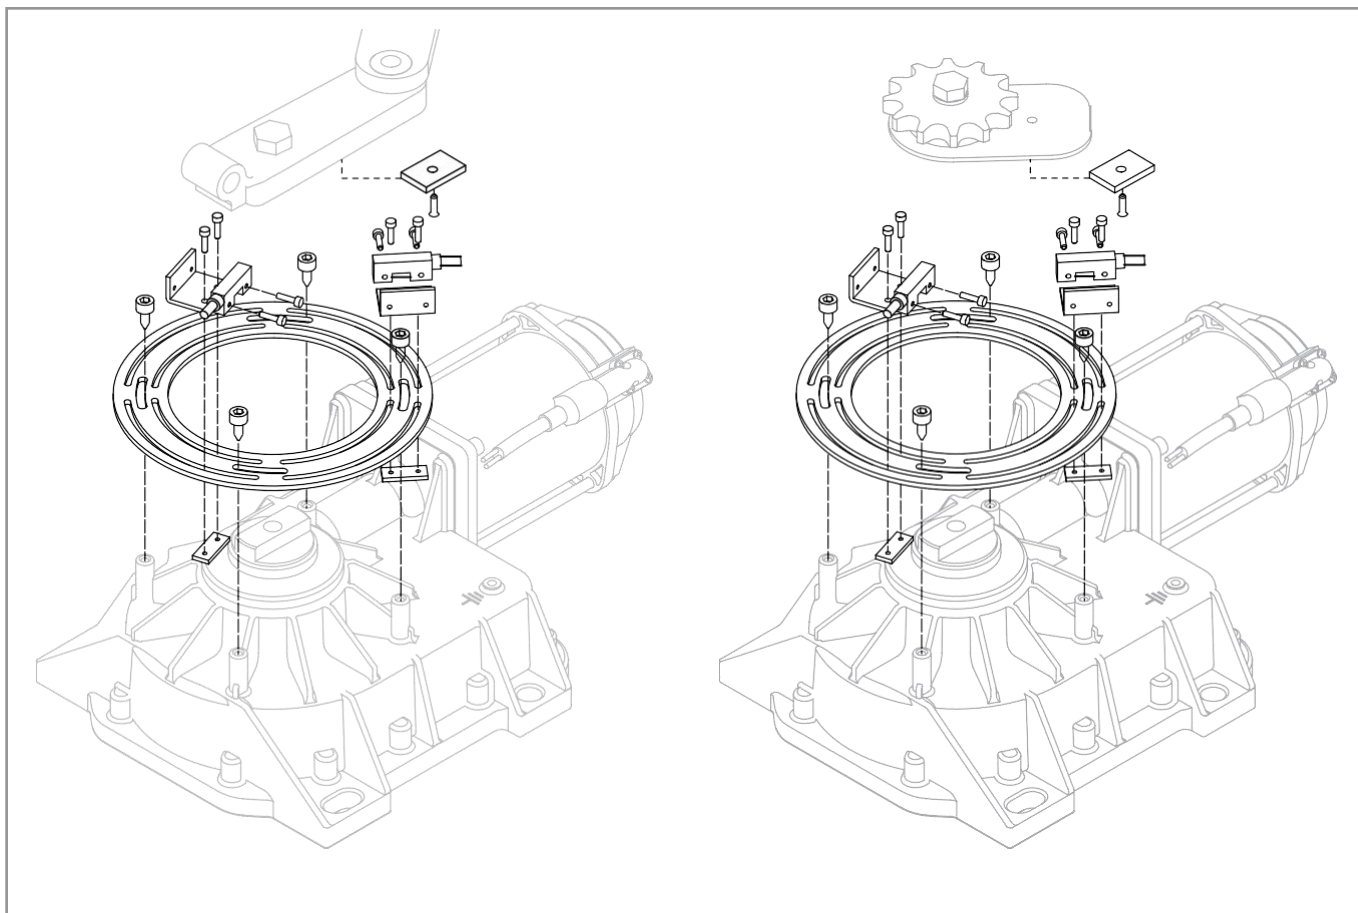




2000

blue - NC
black - NO
brown - common

TECHNICKÉ ÚDAJE	
Kontakt	24 V / 0,4 A
Stupeň ochrany	IP67

Pripojenia vykonajte podľa pokynov v návode na obsluhu ústredne.
Skontrolujte elektrické pripojenia podľa pokynov v príručke k ovládaciemu

 ENTRE//MATIC



ABS Automatic Entrance s.r.o.
Tel +421 908 413 098
sales@automaticentrance.sk
www.automaticentrance.sk

