


Ditec QIKM

IP2017

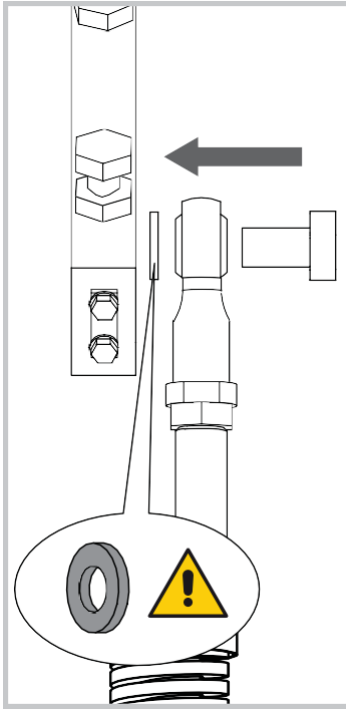

Prestare particolare attenzione al corretto posizionamento della rondella.

Pay special attention to the correct positioning of the washer.

Faire particulièrement attention au positionnement de la rondelle.

Achten Sie besonders auf die richtige Montage der Unterlegscheibe.

Prestar una atención especial al posicionamiento correcto de la arandela.

Prestar particular atenção ao correcto posicionamento da anilha.

Rondelanin doğru konumlandırılmasına özellikle dikkat ediniz.

Venujte osobitnú pozornosť správneho umiestneniu podložky

QIK4E / QIK7EH

PL (mm)	QIKM1	QIKM2	QIKM3
1300 - 1699	QIKM1	/	/
1700 - 1999	/	QIKM1	/
2000 - 2499	QIKM2	/	/
2500 - 2999	/	QIKM2	/
3000 - 3499	/	/	QIKM2
3500 - 4499	QIKM3	/	/
4500 - 5199	/	QIKM3	/
5200 - 5800	/	QIKM4	/

PL (mm)	QIKM1	QIKM2	QIKM3
1900 - 1999	/	/	QIKM1
2000 - 2299	QIKM2	/	/
2300 - 2899	/	QIKM2	/
2900 - 3199	/	/	QIKM2
3200 - 4099	QIKM3	/	/
4100 - 4799	/	QIKM3	/
4800 - 5800	/	QIKM4	/

PL (mm)	QIKM1	QIKM2	QIKM3
2500 - 2999	/	/	QIKM2
3000 - 3600	QIKM3	/	/

PL (mm)	QIKM1	QIKM2	QIKM3
2700 - 3399	QIKM3	/	/
3400 - 3600	/	QIKM3	/

PL (mm)	QIKM1	QIKM2	QIKM3
4600 - 5000	/	QIKM4	/

PL (mm)	QIKM1	QIKM2	QIKM3
2000 - 2299	QIKM2	/	/
2300 - 2899	/	QIKM2	/
2900 - 3199	/	/	QIKM2
3200 - 4099	QIKM3	/	/
4100 - 4450	/	QIKM3	/

QIK80EH

PL (mm)						PL (mm)				
4500-5199	QIKM5	/	/	/		4500-4999	QIKM5	/	/	/
5200-5999	/	QIKM5	/	/		5000-5799	/	QIKM5	/	/
6000-6999	/	/	QIKM5	/		5800-6799	/	/	QIKM5	/
7000-7600	/	/	/	QIKM5		6800-7200	/	/	/	QIKM5

PL (mm)						PL (mm)				
4600-4799	QIKM5	/	/	/		4800-5899	/	/	QIKM5	/
4800-5499	/	QIKM5	/	/		5900-6500	/	/	/	QIKM5
5500-6499	/	/	QIKM5	/						
6500-6800	/	/	/	QIKM5						

PL (mm)				
6700	/	/	/	QIKM5

